



ROMEX® ISATec EARTH ANCHORS

Paver Displacement Tool

ISATec Earth Anchors are placed between pavers and dig into the base to reduce paver shifting and displacement by up to 70%. It also reduces the requirements of pouring concrete bands and it's a perfect solution for paving stone roadways and parking lots. ISATec Anchors are to be placed per site layout plan engineered by ROMEX.

Ideal for roads, streets and driveways.

- Hot galvanized
- 5-Year Warranty options
- Engineering plans designed by ROMEX
- Eliminate damaged and replacement of pavers



No Paver Shifting



5-Year Warranty

*Used in combination with ROMEX®
FLEX JOINT or FUGENSAND Jointing*



1-844-529-2330 | www.romexhardscapes.com | info@romexhardscapes.com


ROMEX® ISATec EARTH ANCHORS

Paver Displacement Tool

APPLICATION

Our product range includes various earth anchors and displacement protectors for your projects and can be used for any paver pattern. ROMEX has addressed paver creep, where pavers split due to dynamic vehicle forces, with an intelligent displacement protection system. Simply send your ROMEX representative a sketch of the project, and we will determine how many and where anchors are required. We have developed various earth anchor protectors tailored to different surface loads and paving stone types, ensuring the reduction of future damage to surfaces.

Paver shift is now a thing of the past with our ISATec Earth Anchors and in combination with ROMEX FLEX JOINT or FUGENSAND jointing solutions depending on the application. This system is eligible for our 5-year warranty and provides peace of mind for trafficked paving areas avoiding huge disturbances and costs compared to if re-work must take place. Invest in your paving's future with ISATec and ROMEX Jointing solutions with complimentary German Engineering.

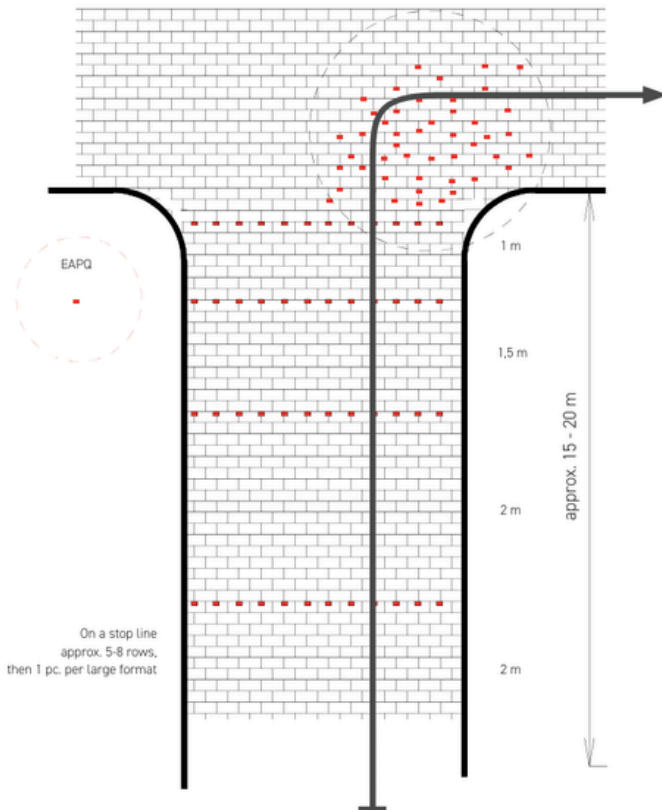

1-844-529-2330 | www.romexhardscapes.com | info@romexhardscapes.com



PLACE ANCHORS

Place anchors per site layout plan provided by ROMEX



ENSURE FIT

Gently tap each anchor into the paver bedding



PLACE PAVERS

Place each paver on top of the anchors



CONTINUE

Continue the first 3 steps until the surface is complete



COMPLETE

Once complete apply your choice of ROMEX jointing material



**CALL BEFORE
YOU INSTALL**

@romexhardscapes

